

SERVICE REQUIREMENTS

These requirements are for vehicles operating under normal conditions only. Refer to the Additional Maintenance Requirements and adjust the servicing as recommended for any applicable conditions.

GR SUPRA (DB06)

R = REPLACE, **S** = SAVE, **C** = CLEAN,
T = TIGHTEN TO SPECIFIED TORQUE,
I = INSPECT, CLEAN AND ADJUST AS
NECESSARY

KEY ■ **DEALER MAY RECOMMEND REPLACEMENT IF UNABLE TO CLEAN. CUSTOMER PAY ITEM**

A	Brake pedal and parking brake operation	I	A	Front and rear suspension components	I
	Air conditioning system operation	I		Steering wheel, linkage, rack, rubber boots	I
	Electrical equipment operation (lights,wipers etc)	I		Drive shaft joints and boots	I
	Electronic health check - ISTA diagnostic computer	S		Manual Transmission oil (visual leak inspection)	I
	Spare tyre - repair kit expiry date	I		Auto trans fluid level & hoses (visual leak inspection)	I
	Fuel tank cap, lines and connections	I		Rear diff oil level	I
	Cabin air filter ■	I		Propeller shaft - tightness of bolts	T
	Brake fluid level (including clutch for M/T)	I		Exhaust system and mountings	I
	Coolant fluid level	I		Body and under body/chassis condition	I
	Cooling and heater system hoses	I		Torque all wheel nuts	T
	Drive belts	I		B Brake and clutch fluid (DOT4 Low Viscosity)	R
	Battery - security, health check	I		C Rear diff oil	R
	Air filter element ■	I	D	Air filter element	R
	Tyre condition and pressure	I		Spark plugs	R
	Wheel bearing condition	I		Cabin air filter	R
	Front brake pads and discs	I	E	Manual transmission oil	R
	Rear brake pads and discs	I		Auto transmission fluid	R
	Brake pipes and hoses	I	F	Engine / heater Coolant (then every 75,000 km / 5 years)	R
	Engine oil & filter	R	ROAD TEST (Verify overall performance and operation)		
	Ball joint and dust cover	I			

SERVICE INTERVAL

(SERVICE BY
AGE OR KM,
WHICHEVER
OCCURS FIRST*)

VEHICLE AGE/YR	KM	RECOMMENDED * Interval will change for severe usage, see over										
1	15,000	A										
2	30,000	A	+	B								
3	45,000	A	+		C							
4	60,000	A	+	B	+	D						
5	75,000	A										
6	90,000	A	+	B	+	C	+	E				
7	105,000	A										
8	120,000	A	+	B	+	D						
9	135,000	A	+		C							
10	150,000	A	+	B	+	F						
11	165,000	A										
12	180,000	A	+	B	+	C	+	D	+	E		
13	195,000	A										

ADDITIONAL MAINTENANCE REQUIREMENTS

GR SUPRA (DB06)

Some additional requirements maybe necessary due to vehicle usage

If your vehicle is operating in conditions not covered in the list below, please contact the Service Manager of your Toyota store who will recommend the best service for your vehicle.

1 VEHICLES THAT ARE SUBJECT TO SEVERE USAGE SUCH AS REPEATED HARD DRIVING INCLUDING TRACK/MOTORSPORT USE.

- **Engine oil and oil filter:** Inspect before and after severe/track use and replace as necessary.
- **Brake pads and discs:** Inspect before and after severe/track use and replace as necessary.
- **Brake fluid:** Inspect condition before and after severe/track use and replace as necessary.
- **Transmission and diff fluids:** Inspect/replace as necessary.
- **Steering linkage, suspension joints, rubber boots:** Inspect more frequently including before and after severe/track use.
- **Tightness of chassis/body nuts and bolts:** Inspect more frequently including before and after severe/track use.
- **Exhaust system and mountings:** Inspect more frequently including before and after severe/track use.

2 VEHICLES THAT ARE SUBJECT TO EXTENDED PERIODS OF IDLING AND/OR SLOW SPEED DRIVING.

- **Engine oil and oil filter:** Shorten normal replacement interval.

3 VEHICLES THAT ARE SUBJECT TO REPEATED SHORT TRIPS (LESS THAN 10 KILOMETRES) WHERE THE OUTSIDE TEMPERATURE IS BELOW FREEZING, OR THE ENGINE TEMPERATURE DOESN'T REACH NORMAL.

- **Engine oil and oil filter:** Shorten normal replacement interval.

4 VEHICLES THAT ARE USED FREQUENTLY IN DUSTY CONDITIONS.

- **Engine oil and oil filter:** Shorten normal replacement interval.
- **Air filter:** Inspect more frequently and shorten normal replacement interval if required.
- **Cabin air filter:** Inspect more frequently.
- **Brake discs, pads, drum, linings:** Inspect more frequently.
- **Brake fluid:** Inspect more frequently for contamination.
- **Propeller shaft joints:** Shorten normal grease replacement interval.

5 VEHICLES THAT ARE USED FREQUENTLY ON ROUGH ROADS OR MUDDY CONDITIONS.

- **Brake discs, pads, drum, linings:** Inspect more frequently.
- **Brake fluid:** Inspect more frequently for contamination.
- **Steering linkage, suspension joints, rubber boots:** Inspect at half the specified distance or time.
- **Propeller shaft joints:** Shorten normal grease replacement interval.
- **Body and underbody/chassis condition:** Inspect/clean more frequently.
- **Tightness of chassis/body nuts and bolts:** Inspect more frequently.

6 VEHICLES DRIVEN THROUGH WATER SUCH AS FORDING STREAMS OR FLOODED ROADS.

- **Brake and clutch operation:** Inspect immediately.
- **Transmission fluid:** Inspect as soon as practicable.
- **Radiator and A/C condenser:** Inspect fins are clear of debris.
- **Propeller shaft joints:** Grease within 24 hours of being submerged.
- **Differential oil front and rear:** Check for water contamination as soon as practicable.